

1/13

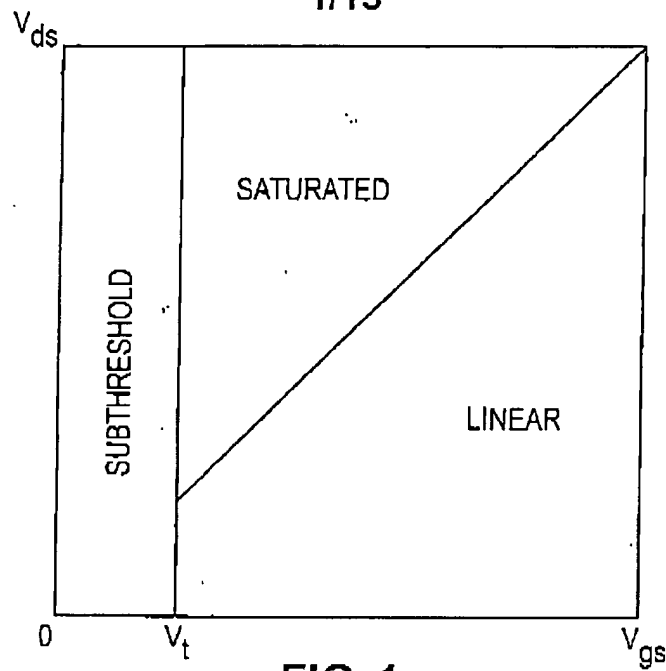


FIG. 1

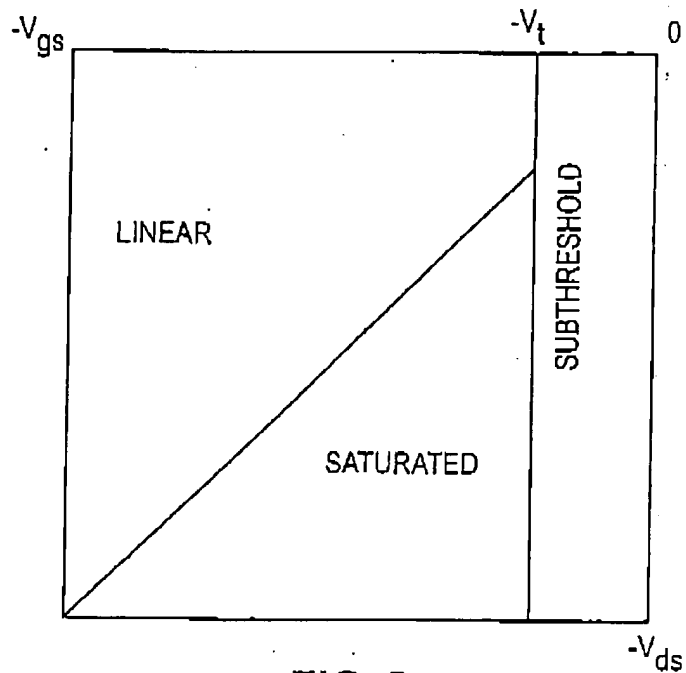


FIG. 2

2/13

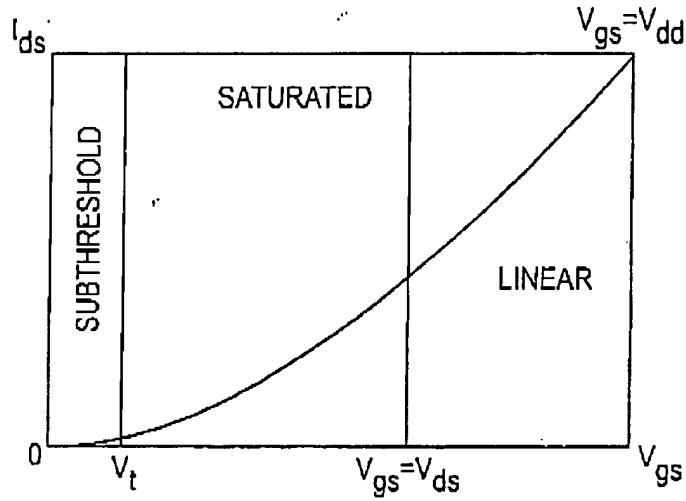


FIG. 3

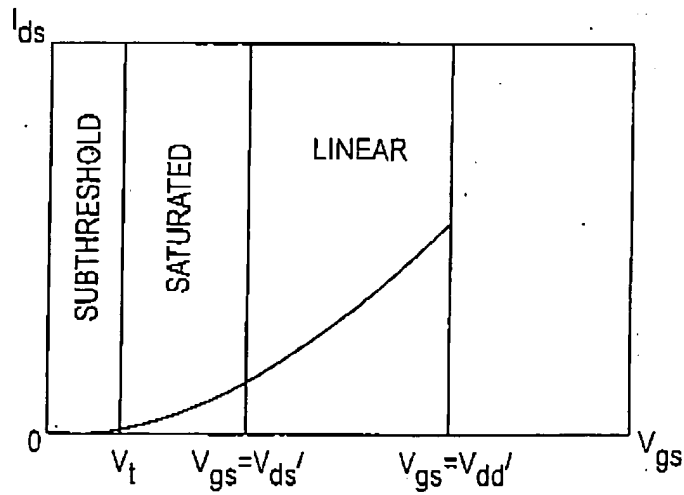


FIG. 4

3/13

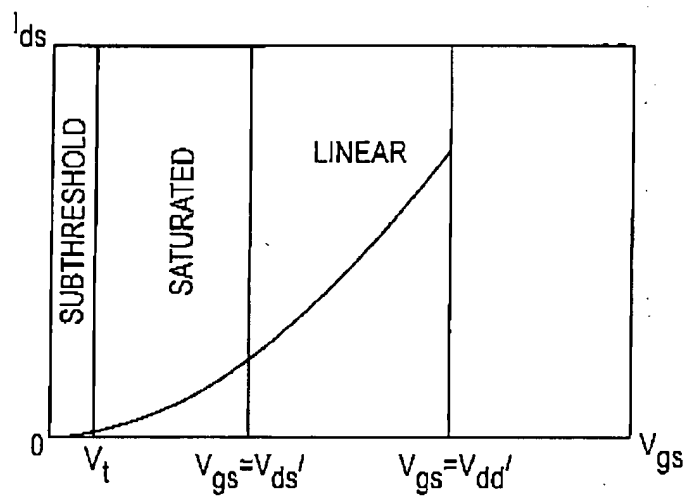


FIG. 5

4/13

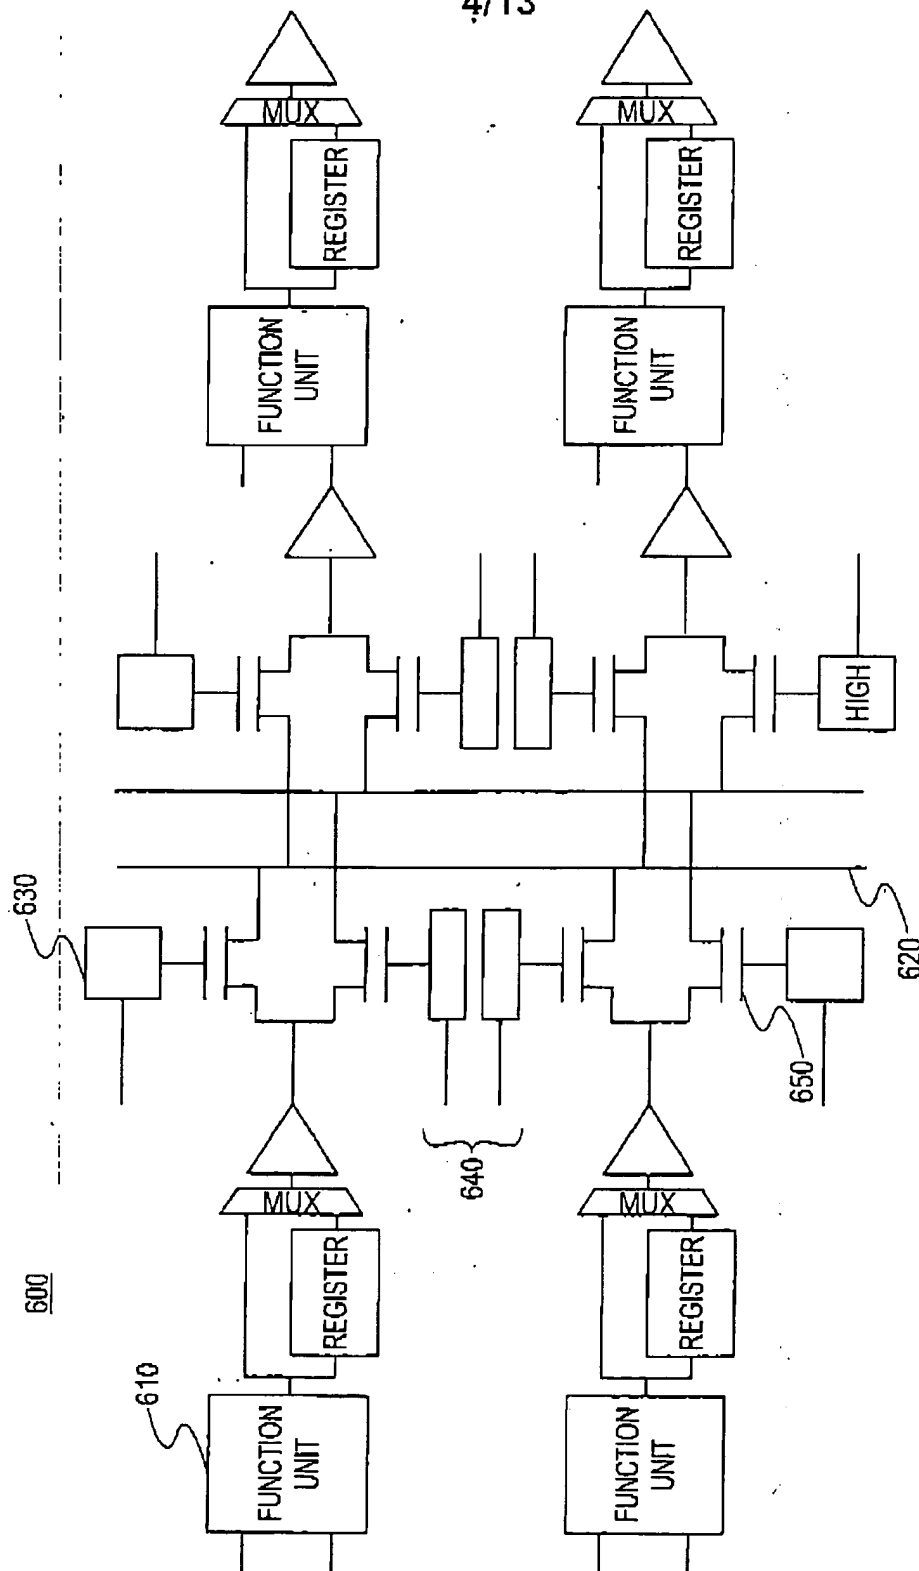


FIG. 6

5/13

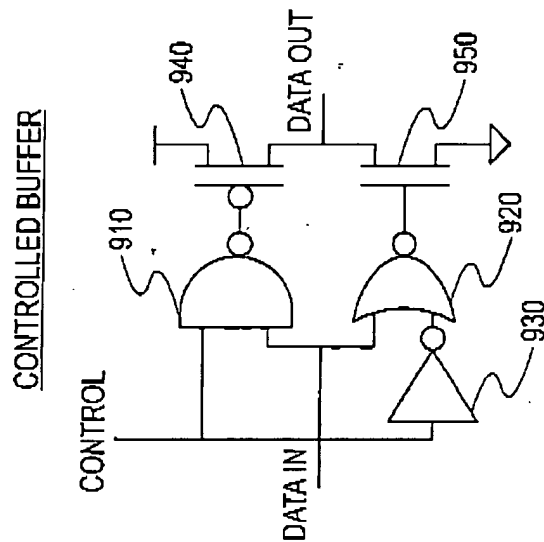


FIG. 9

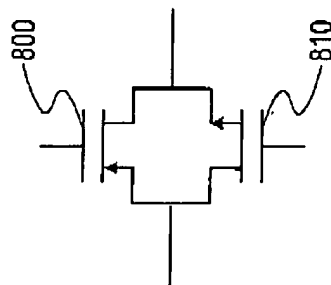


FIG. 8

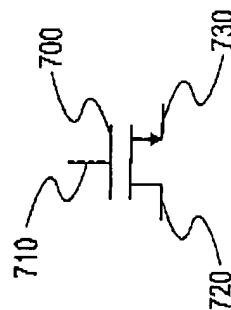


FIG. 7

6/13

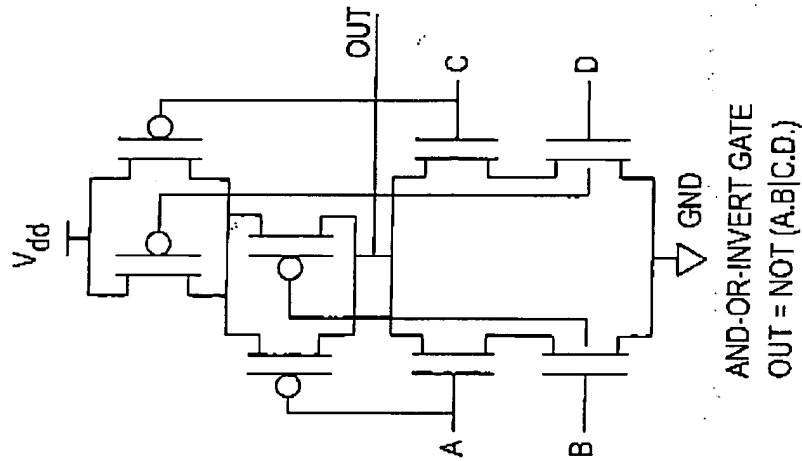


FIG. 10C

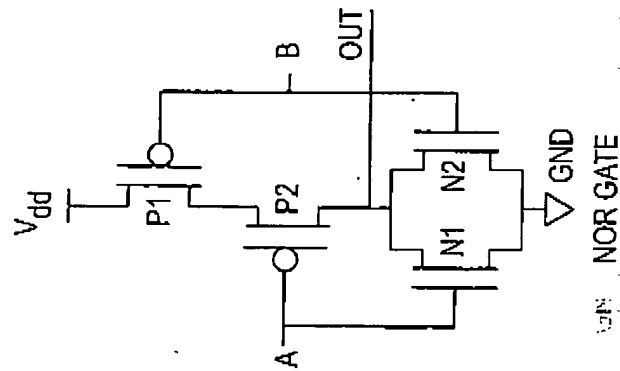


FIG. 10B

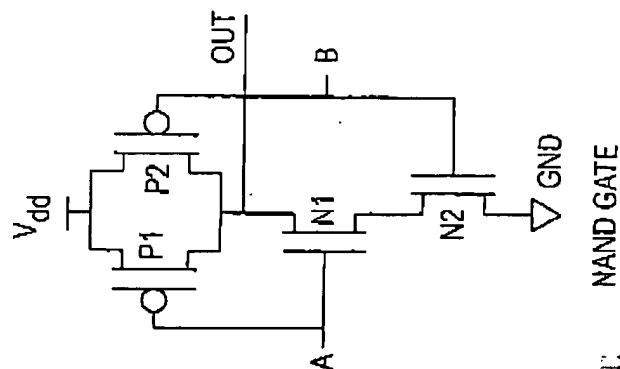


FIG. 10A

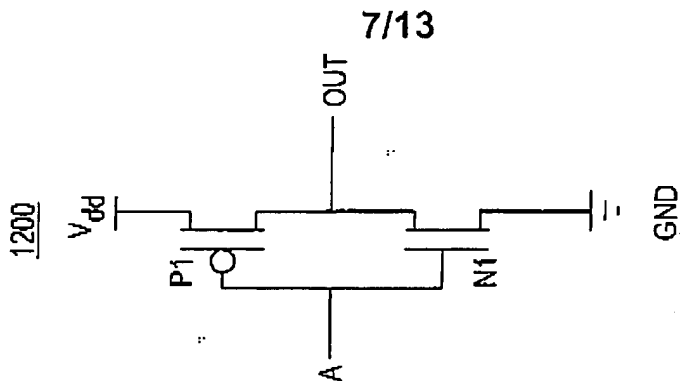


FIG. 12

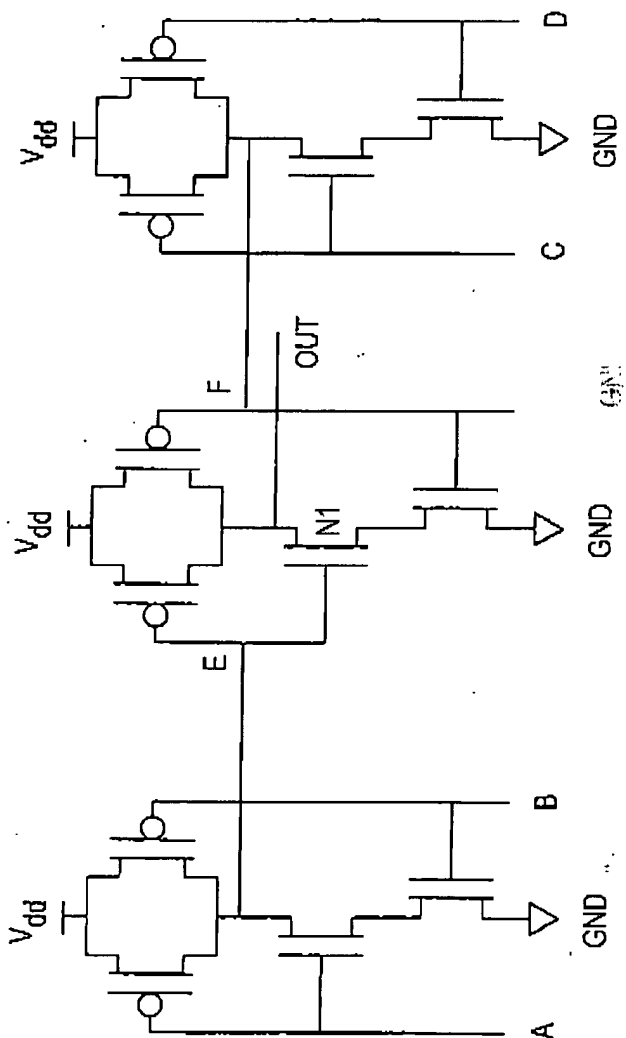


FIG. 11

8/13


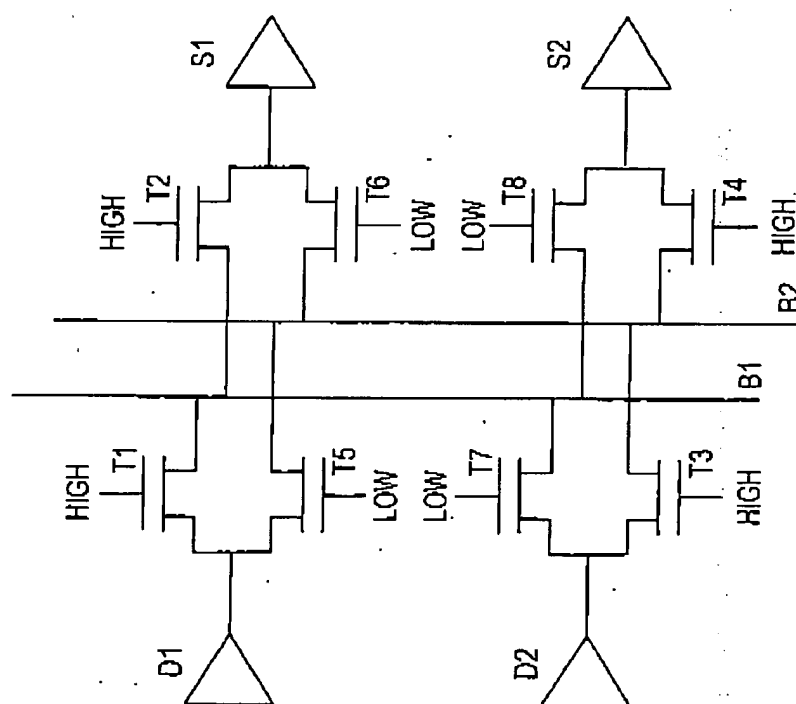


FIG. 13



9/13

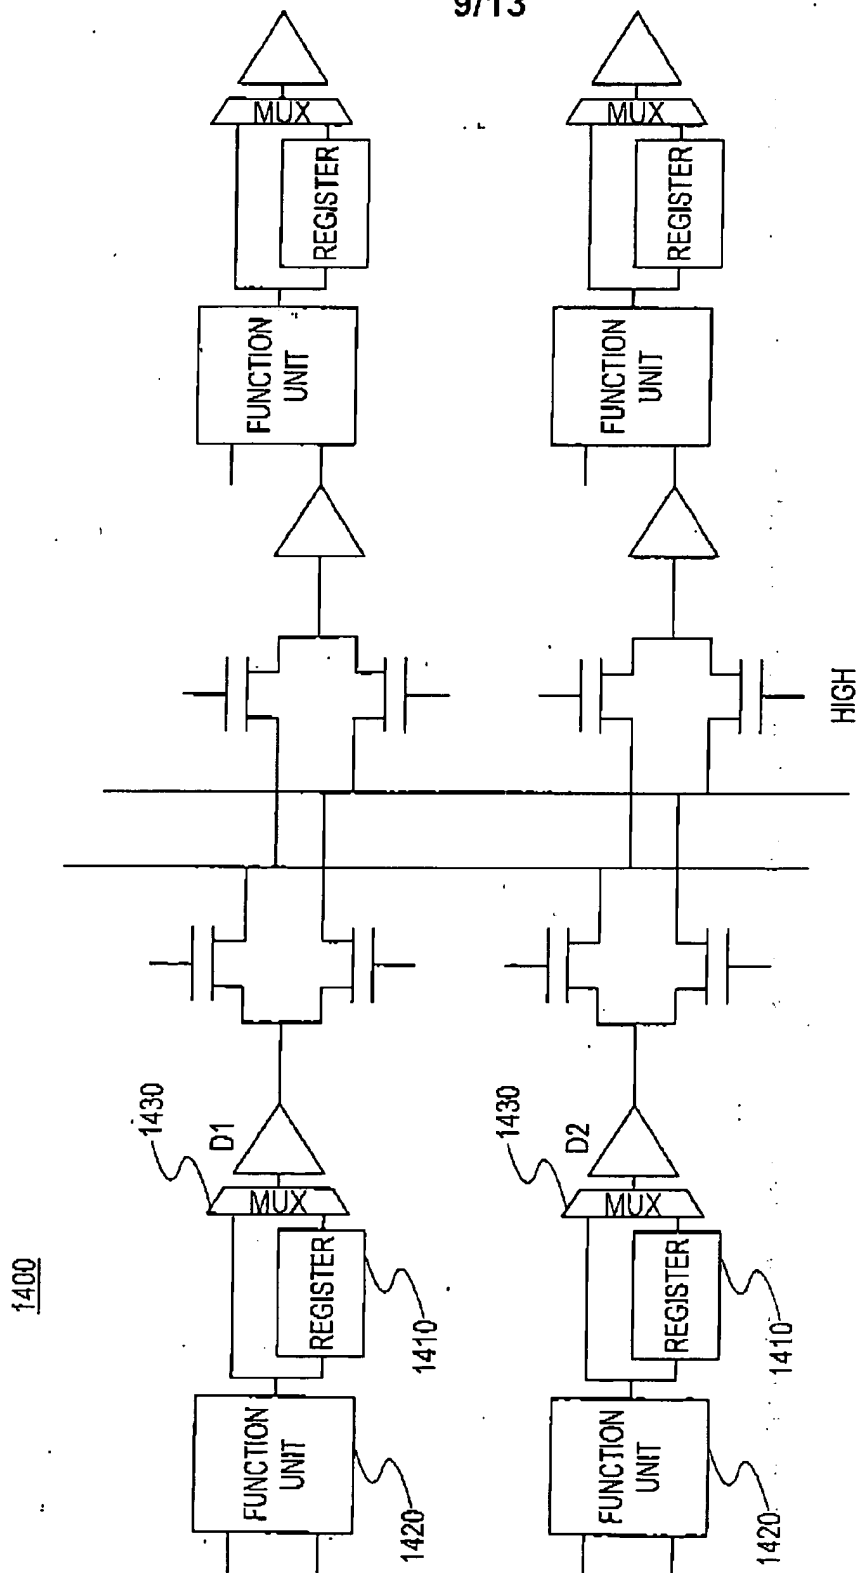

10/13

TRISTATE BUFFER

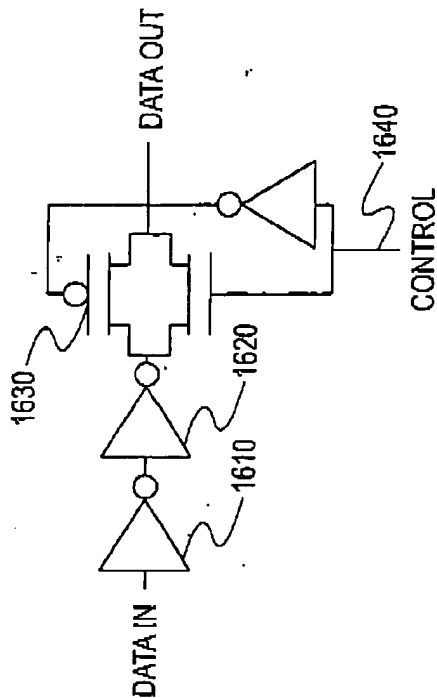


FIG. 16A


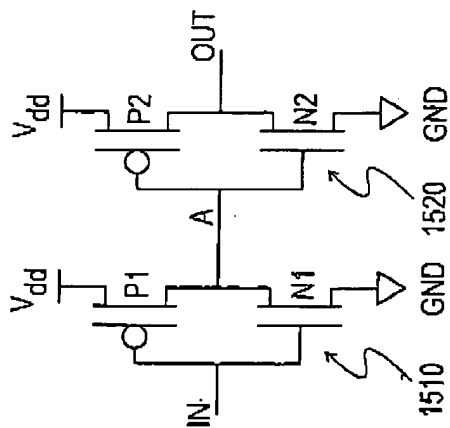


FIG. 15

11/13

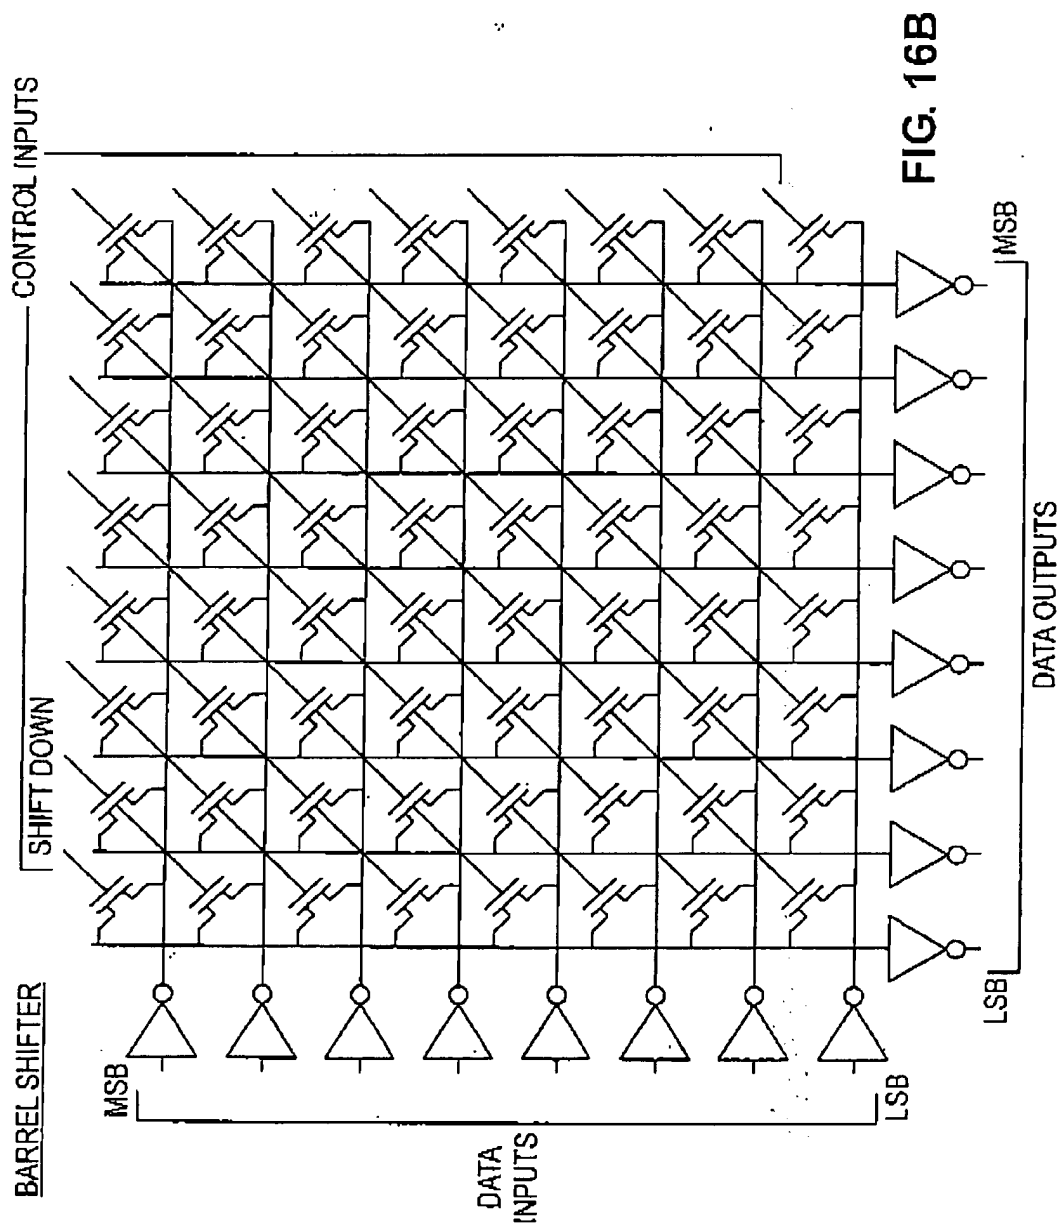

12/13

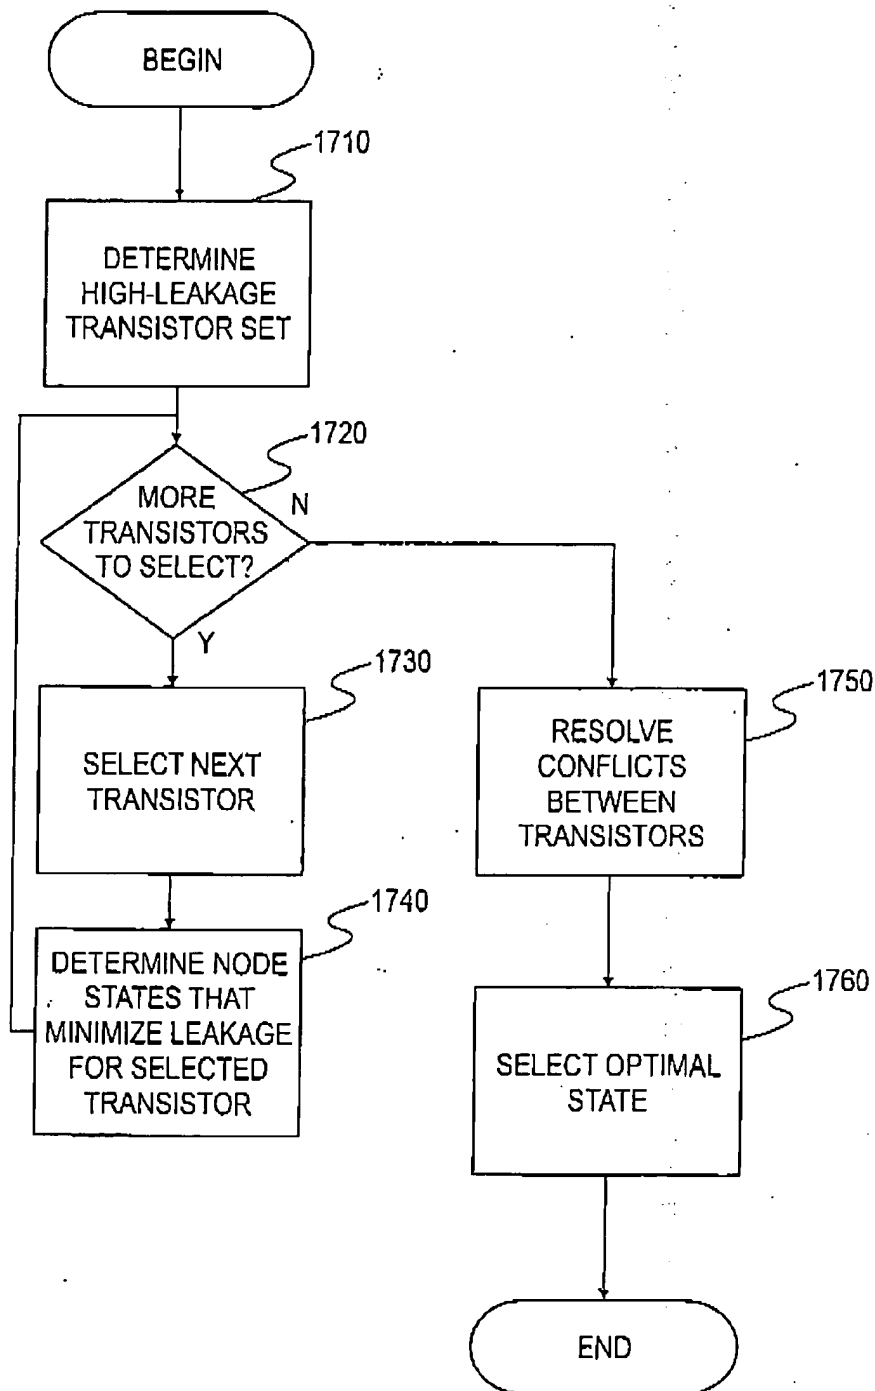


FIG. 17

13/13

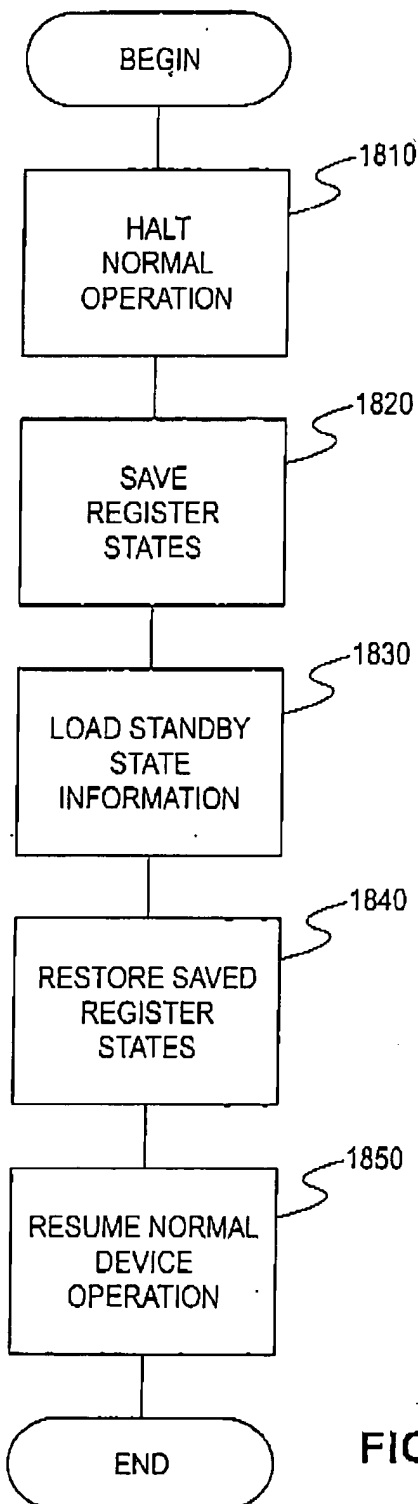


FIG. 18